

# OWNER'S MANUAL

## COMPACT SERIES

---



## **IMPORTANT SAFETY INSTRUCTIONS**

When using an electronic appliance, basic safety precautions should always be followed. Read all guidelines before operating the unit.

To reduce risk of fire, electric discharges or injuries:

- Use this vacuum only for its intended use as described in this manual. (Use of attachments not recommended by the manufacturer may cause fire, electric shock, injury or damage to system components.)
- Do not allow vacuum to be used as a toy. Close supervision is necessary when this vacuum is used by or near children.
- Do not leave the unit running without any supervising. Disconnect the unit if it is not used and before maintenance.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- This vacuum cleaner is intended for dry pick up only. Do not use on wet or humid surfaces, waste solvents (paint or other), explosive materials that would cause harm to the vacuum cleaner.
- Do not vacuum drywall dust or baking flour as it may cause damage to your vacuum.
- Avoid picking up hard or sharp objects to prevent damaging or block the hose and the plastic pipes.
- Do not put any object into openings. Do not use if an opening is blocked. Keep free of dust, lint, hair and anything that may reduce airflow/suction. Lack of air flow will cause the motor to overheat.
- This vacuum cleaner creates suction. Keep hair, face, fingers, all body parts and loose clothing away from any openings.
- Never operate without dust bag and/or filter in place.
- Never plug in a unit designed to operate with a current of 120V in a 230V outlet and vice versa.
- If the power cord is damaged, it must be replaced by a special cord available from the authorized local dealer/distributor.
- Do not use extension cords or outlets with inadequate current carry capacity.
- Never operate this vacuum if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged. Return to authorized dealers/distributor for repairs.
- Never handle plug, cord or power units with wet hands.

- Never disconnect plug by pulling cord. To disconnect from the outlet, grasp the plug, not the cord.
- Connect to a properly grounded outlet only. See grounding instructions.
- Keep cord away from heated surfaces.
- Turn off all controls before unplugging.
- Hoses with electrical connections must not be used if damaged.

By overlooking safety rules, you might risk putting your health in danger and to those who surround you!

**Drainvac disclaims any responsibility should you infringe upon these guidelines.**

**SAVE THESE INSTRUCTIONS**

# TABLE OF CONTENTS

## TECHNICAL SPECIFICATIONS

TYPES OF UNITS .....	7-9
UNIT DESCRIPTION .....	10-11
DUST BAGS AND FILTERS .....	12

## UNIT INSTALLATION

FIRST THINGS FIRST .....	13
MOUNTING THE UNIT ON THE WALL .....	14-15
CONNECTING THE AIR INLET .....	15
FILTER / DUST BAG .....	16
AUDIOPROTEK MUFFLER .....	17
ACTIVAC 3 / MUFFLER .....	18

## PIPING INSTALLATION

GENERAL NOTICE .....	19
DIAGRAM OF AN INSTALLATION .....	20
DIFFERENT INSTALLATION POSSIBILITIES .....	21
EXAMPLES OF PROPER AND IMPROPER INSTALLATIONS .....	22-24

## ELECTRICAL POWER SUPPLY

CONNECTION PROCEDURES .....	25
DIAGRAM OF AN APPROPRIATE CONNECTION .....	26
GROUNDING INSTRUCTIONS .....	27

## MAINTENANCE PROCEDURES .....

28

## WEEE GUIDELINES / ROHS / SUPPORT .....

29

## TECHNICAL PROBLEMS .....

30

## ANNEX

ANNEX I (CIRC02)
ANNEX II (CIRC03)
ANNEX III (CIRC18)

## INTRODUCTION

Thank you for choosing a Drainvac product.


Please read carefully the following instructions.

The installation and operation procedures must be followed to obtain maximum performance and avoid unnecessary service calls.

## REGISTRATION

To fill in the Drainvac product registration form, go to  
[www.drainvac.com/client-support/register-your-drainvac](http://www.drainvac.com/client-support/register-your-drainvac)

First off, we recommend you to fill out this form before you start the installation process. If you have any concerns or problems you may encounter, please contact the nearest retailer. The unit's profile will be required.

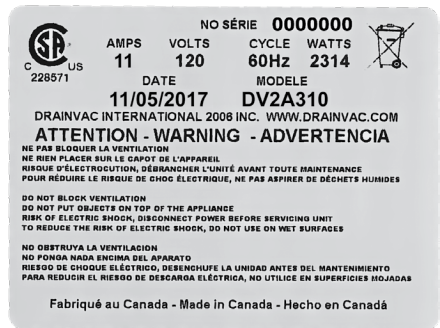

*Metal tag*

**Model\*:** \_\_\_\_\_

**Serial number\*:** \_\_\_\_\_

**Retailer name:** \_\_\_\_\_

**Date of purchase:** \_\_\_\_\_

**Date of the last maintenance:** \_\_\_\_\_

\*This information is found on a metal tag located on the left side of the unit.

# TECHNICAL SPECIFICATIONS

You have purchased one of the following models. Identify the one to related to it.  
The model number appears on the technical label stuck on the left side of the unit.



## PRO SERIES

### NORTH AMERICA (108V - 120V)

MODELS	AIR WATTS	H <sub>2</sub> O	CFM	DECIBELS	AMPS	GAL. / L	SIZE in / cm
PRO106	600	129	140	69	12.75	Up to 3.75 / 17	12 dia. x 23 / 30 dia. x 58

### INTERNATIONAL (220V - 240V)

MODELS	AIR WATTS	mmH <sub>2</sub> O	m <sup>3</sup> /h	DECIBELS	AMPS	GAL. / L	SIZE in / cm
PROE107	700	3880	315	65	7	Up to 3.75 / 17	12 dia. x 23 / 30 dia. x 58
PROE207	700	3880	315	65	7	Up to 9 / 41	15 dia. x 28 / 38 dia. x 70



# TECHNICAL SPECIFICATIONS



## GENERATION 2 SERIES

### NORTH AMERICA (108V - 120V)


MODELS	AIR WATTS	H <sub>2</sub> O	CFM	DECIBELS	AMPS	GAL./L	SIZE in/cm
G2E-007H	700	138	153	60	14	Up to 9 / 41	15 dia. x 28 / 38 dia. x 70
G2-008	800		138				
G2-2X3	2 x 302	160	105	70	13.5		
G2-2X5	2 x 520	170	135	72	13.5 (208V - 240V)		

### INTERNATIONAL (220V - 240V)

MODELS	AIR WATTS	mmH <sub>2</sub> O	m <sup>3</sup> /h	DECIBELS	AMPS	GAL./L	SIZE in/cm
G2E-007	700	3880	315	58	7	Up to 9 / 41	15 dia. x 28 / 38 dia. x 70
G2E-007H		3500	246	62	7.4		
G2E-2X5	2 x 520	4318	271	72	14		

\*G2-2X3, G2-2X5 and G2E-2X5 include 2 motors.

# UNIT DESCRIPTION

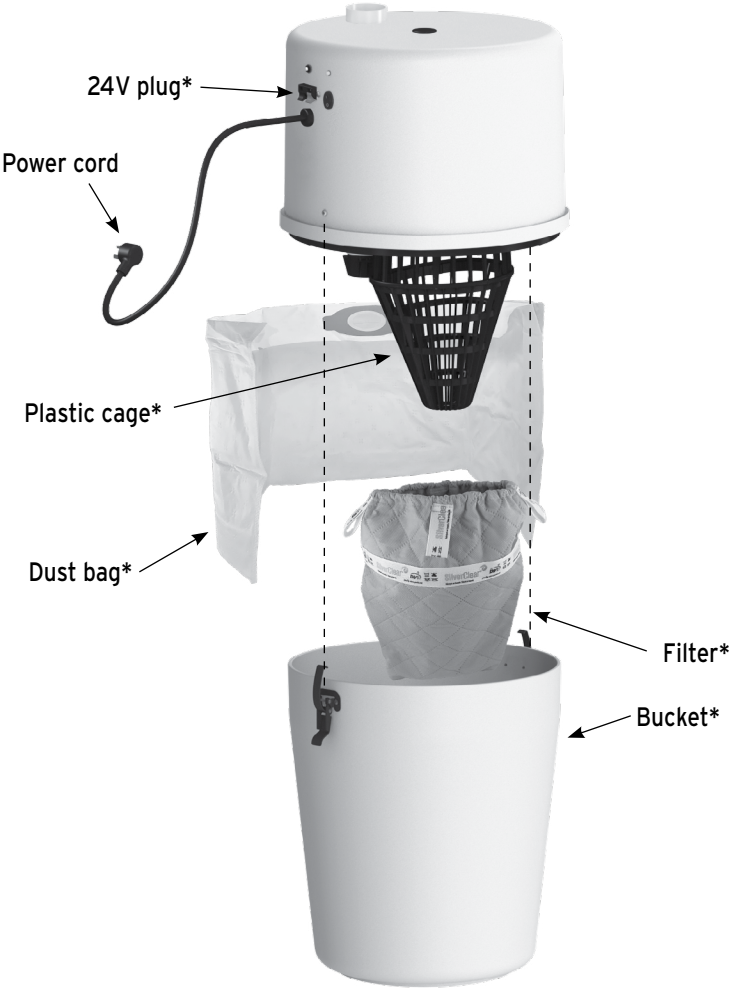


## ILLUSTRATED CONFIGURATION OF A SINGLE-MOTOR UNIT

PRO, S1000, DV AIR series and models: G2-008, G2E-007, G2-007H, G2E-007H

\*Your model may vary from the illustrated figure.

# UNIT DESCRIPTION

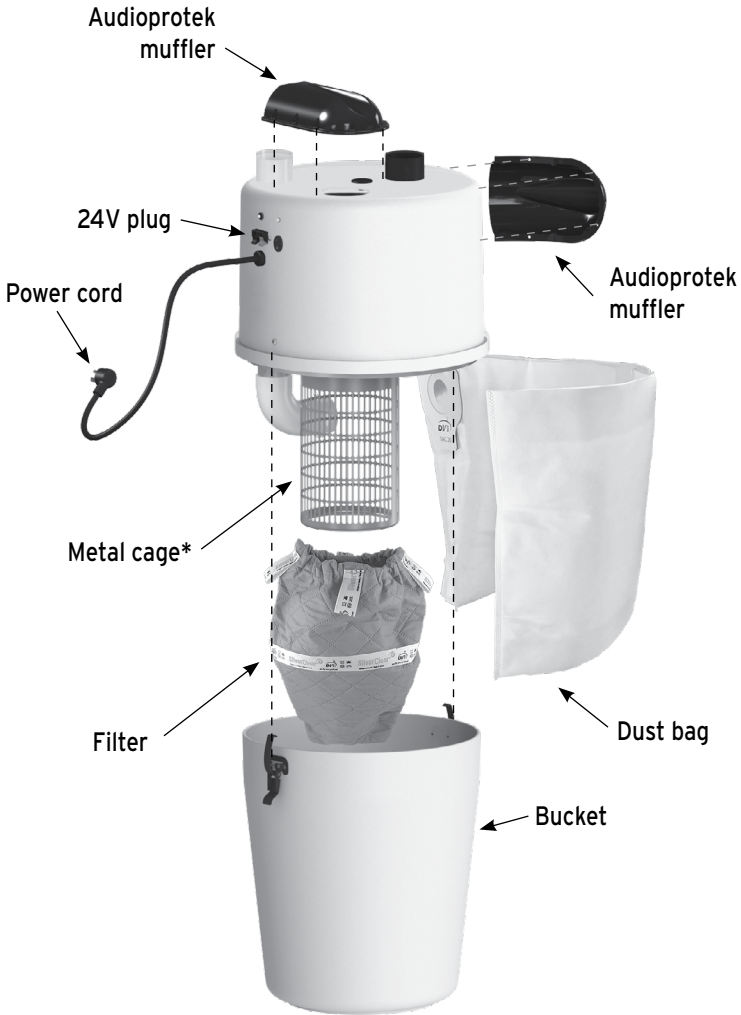

## ILLUSTRATED CONFIGURATION OF A DUAL-MOTOR UNIT

G2-2X3, G2-2X5, G2E-2X5

\*Do not insert your hand in the metal cage while the unit is running.

# DUST BAGS AND FILTERS

Please mark the dust bag and the filter which corresponds to your vacuum in order to refer yourself when the time will come to change it.



## SAC14

Disposable 2-ply paper dust bags, 9 gal. (41L)

*G2-007H, G2E-007H, G2-2X3, G2-2X5, G2E-2X5*



## SAC20

Disposable 3-ply cloth dust bags, 9 gal. (41L)

*G2-007H, G2E-007H, G2-2X3, G2-2X5, G2E-2X5*



## SAC31

Disposable 3-ply cloth dust bags, 3,75 gal. (17L)

*PRO106, PROE107, S1008, SE1007*



## SAC32

Disposable 3-ply cloth dust bags, 9 gal. (41L)

*PROE207, G2-008, G2E-007*



## FILT07DVI

Metal cage filter with a capacity of 9 gal. (41 L)

*G2-007H, G2E-007H, G2-2X3, G2-2X5, G2E-2X5*



## FILT33DVI

Plastic cage filter with a capacity of 9 gal. (41 L)

*PROE207, G2-008, G2E-007*



## FILT30DVI

Plastic cage filter with a capacity of 3.75 gal. (17 L)


*PRO106, PROE107, S1008, SE1007*

Every model of the compact series is designed to operate with a dust bag and a cage filter. Improper use will void the warranty.

# UNIT INSTALLATION

- FIRST THINGS FIRST -


## REQUIRED TOOLS




Hole Saw  
2.25" (57 mm)



Drill with  
0.5" (12.5 mm) bit



Mitre-Box and Saw  
OR

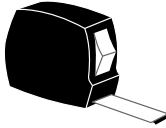

Measuring Tape



Cutting Pliers



PVC Pipe Cutter  
2" (50 mm)


5/16" socket head, phillips  
and regular screwdriver

## WHERE TO INSTALL THE UNIT

We recommend installing the system on the **lowest level of the building** to avoid having to work against gravity. Dust and solids will fall easier than being pulled upwards, this is why the basement is generally the most ideal location. If there is no basement, the garage or a storage room will do.

## MINIMUM DIMENSIONS AND SPACING


It is important to install the unit in a location where it will be easily accessible for maintenance and to effectively evacuate dust. The minimum spacing required is the following:

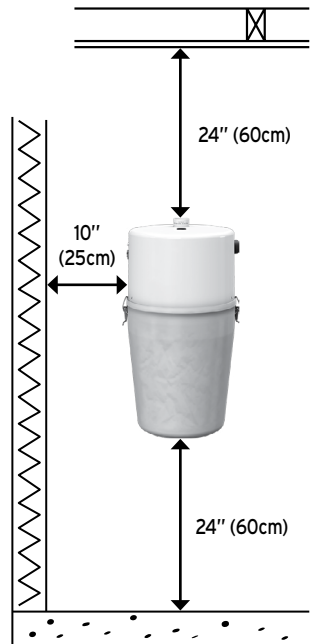


# UNIT INSTALLATION

## 1) MOUNTING THE UNIT ON THE WALL

- Undo the fastener securing the wall bracket and base at the back of the unit with cutting pliers.

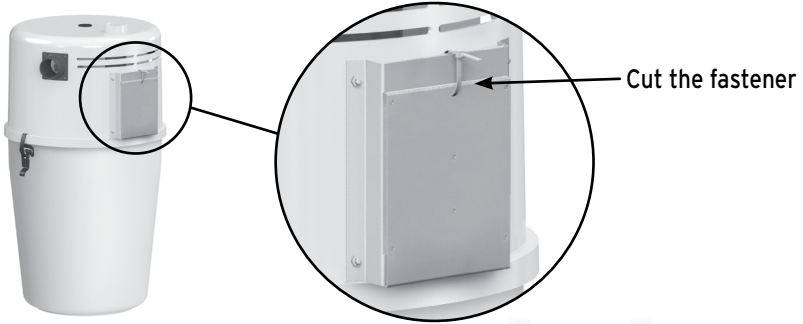

- If the wall is covered with gypsum board, we recommend installing a wooden panel screwed to the wall studs beforehand for more stability. Then, screw the bracket to the wall with the five (5) screws supplied with the unit.

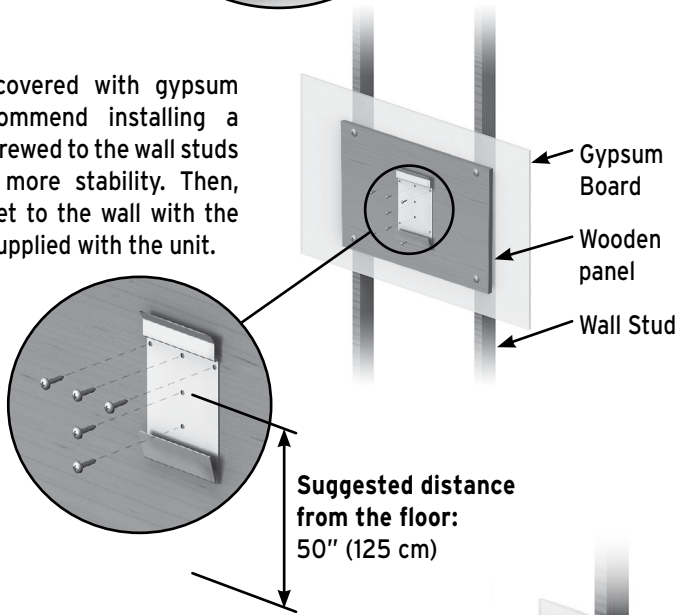


- For a installation directly on a wall stud, screw three (3) screws in the middle area only.



# UNIT INSTALLATION

- Lift the head to slide its support onto the wall bracket.

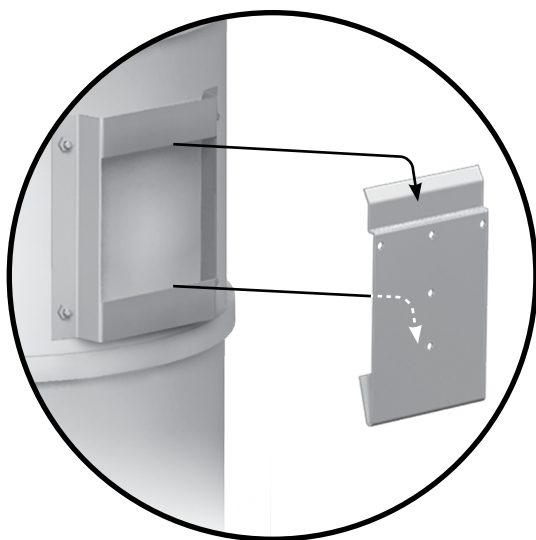

## 2) CONNECTING THE DUST INLET

Connect the dust inlet onto the unit securing it with a collar (do not glue).




# UNIT INSTALLATION

All units are supplied with an SMS filter and a dust bag (the filter is already preinstalled to the unit).


## 3) FILTER

Using the clamps, disconnect the tank from the main unit. You should see the filter preinstalled. Ensure that the cloth filter is properly set up completely to the top of the plate.

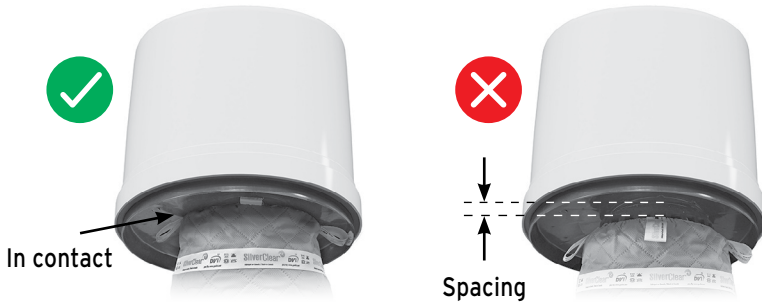

## 4) DUST BAG

Install the appropriate dust bag for your model and follow the instructions printed on the back of the packaging.

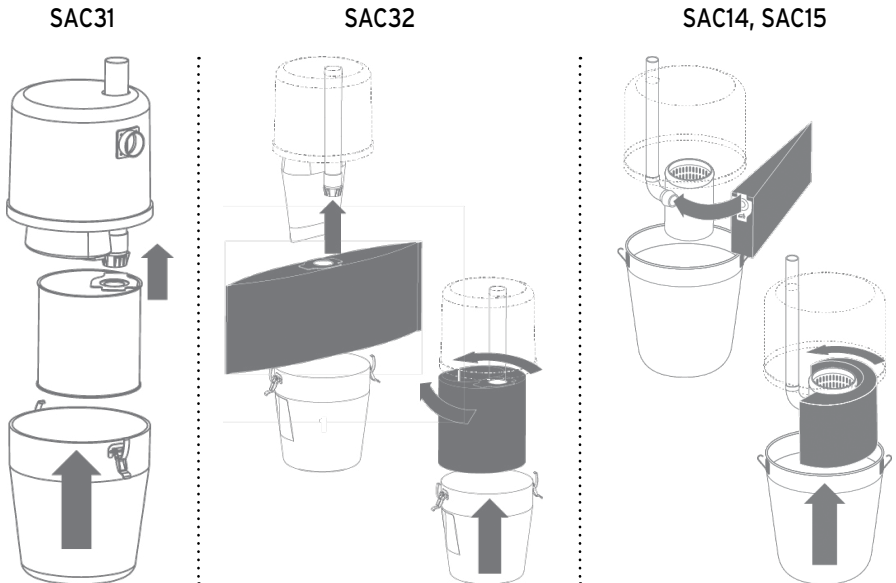

# UNIT INSTALLATION

## 5) AUDIOPROTEK MUFFLER

Models G2-2X3, G2-2X5 and G2E-2X5 are supplied with two audioprotek mufflers.

Peel the plastic strip from the foam and stick the muffler onto the unit's head. The straight muffler goes on top, and the curved one on the side.



# ACTIVAC 3 AND MUFFLER INSTALLATION

The muffler and the Activac 3 exhaust filter are sold separately.  
**WARNING** - The Activac 3 can only be used with single motor units.

## ACTIVAC 3 - FOR SINGLE MOTORS ONLY

Clamp the 90° short elbow to the unit with the supplied collar and insert the Activac 3 filter to the other end with a second collar (do not glue).



## MUFFLER

Connect the air outlet to the unit, securing it with a clamp and install the muffler with a second collar (do not glue).

The 90° elbow can be replaced by a straight pipe.



Simple motor



Double motor

# PIPING INSTALLATION

The following pages illustrate piping diagrams, typical installations and the parts that we recommend for an optimum performance of your central vacuum system.

## GENERAL INFORMATION

- An air outlet leading outside must always be installed on a two-motor unit. Make sure that the evacuated air does not lead under a carpet.
- If your unit includes two motors, it is important to use metal piping and couplings for the air outlet.
- To determine where to locate the wall inlets, use the length of the vacuum hose as a basis, measuring the furthest point from the wall where the wall inlets are to be installed. Do the same for all the wall inlets until all areas of the house or building can be reached with the vacuum hose, by moving it from one wall inlet to another; **don't forget to install one in the garage or outside to vacuum your car.**
- If your walls are made of gypsum board, **never install a wall inlet in the centre of the wall.** Drill the holes for the wall inlets close to a wall stud or a door frame.
- Any screw length can be used if you install the piping as illustrated in **Figure A**.
- If you install the piping as illustrated in **Figure B**, make sure to position the small screw in the right place to avoid piercing a hole through the pipe.
- Always use a short elbow when connecting the wall inlets (**Figures A and B**) to prevent long objects (for example, a pencil) that may have been vacuumed by mistake from blocking the piping further on.


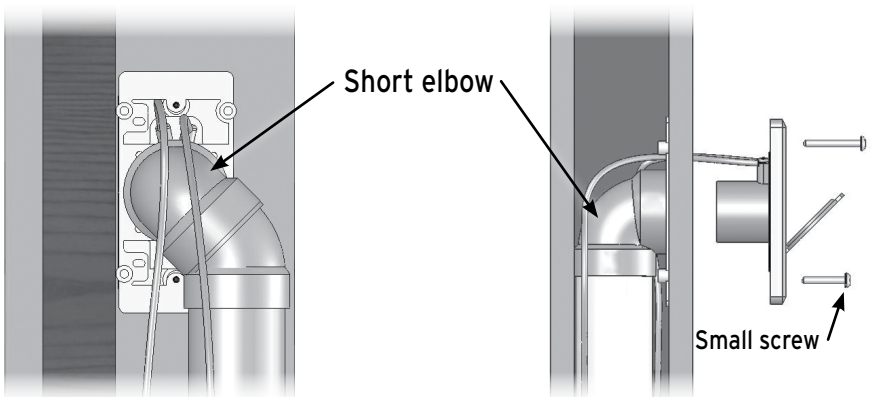


Figure A

Figure B

# PIPING INSTALLATION


## DIAGRAM OF A RESIDENTIAL INSTALLATION

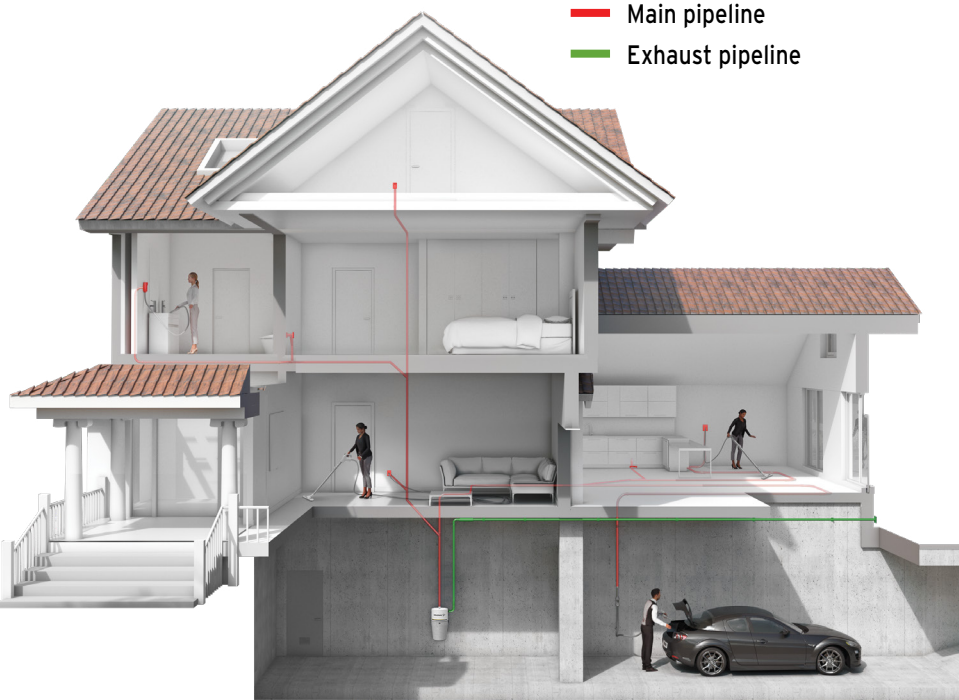

**Wallyflex**  
Installation



**Retraflex**  
Installation

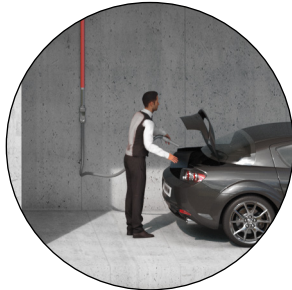

**Vroom Retract Vac**  
Installation

# PIPING INSTALLATION


## DIFFERENT INSTALLATION POSSIBILITIES




**On the top floor**  
(at the end of a pipeline)



**On an intermediary floor**

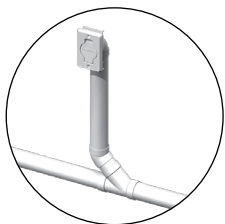

**On the first floor**  
(connected above a  
pipeline under the floor)

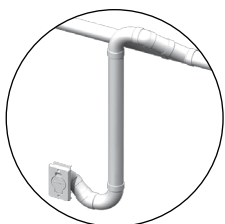


**In the basement**  
(connected under a  
pipeline under the floor)






**Back-to-back**

# PIPING INSTALLATION

## EXAMPLES OF PROPER AND IMPROPER INSTALLATIONS



Thin wall  
Thick wall  
For wall plates only




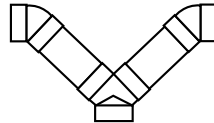



Joint with inside stoppers

Smooth joint without inside stoppers







# PIPING INSTALLATION

## EXAMPLES OF PROPER AND IMPROPER INSTALLATIONS

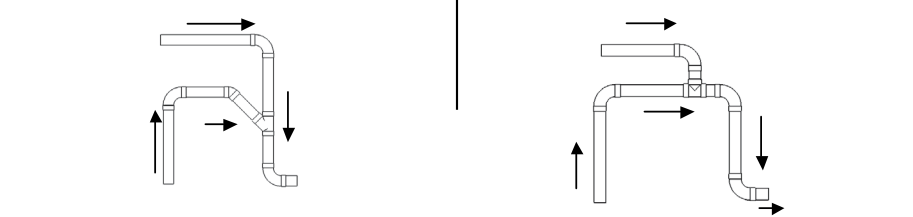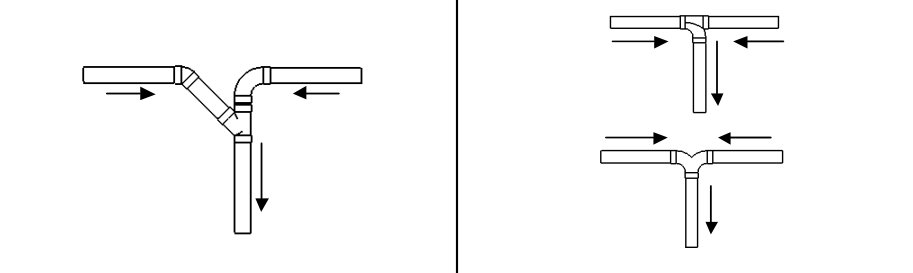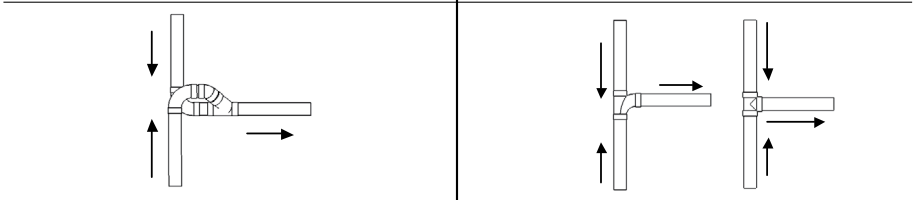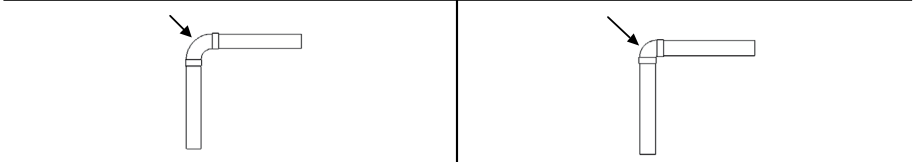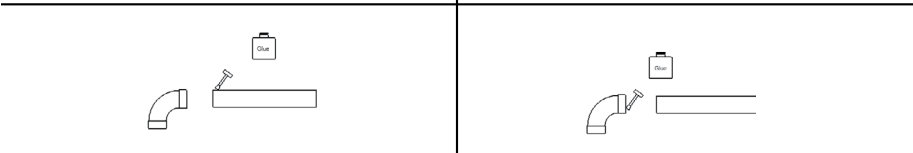

# PIPING INSTALLATION

## EXAMPLES OF PROPER AND IMPROPER INSTALLATIONS

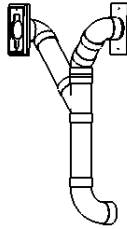


# ELECTRICAL POWER SUPPLY

An electrical cord is equipped to all central vacuum systems. An adequate electrical power outlet must be installed near the unit. **We strongly recommend installing an electrical circuit which will be used only for the unit.**



## CONNECTION PROCEDURE

- Install the 24-volt wires from the network (each wall inlet) to the unit.\*
- Connect the unit to the electrical outlet with the power-supply cord.
- The unit is now ready to be used.

\* The 24V wire connection may differ depending on your model.

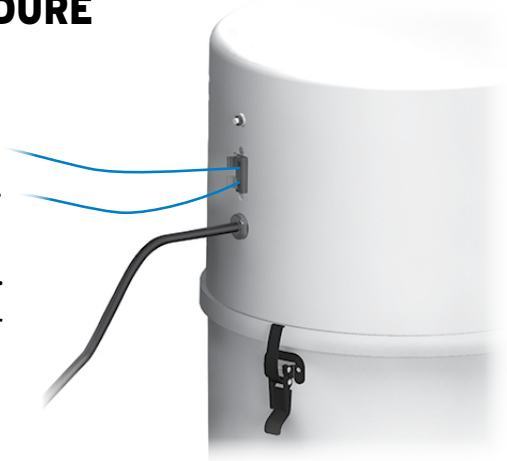

## EXAMPLES OF PROPER AND IMPROPER INSTALLATIONS

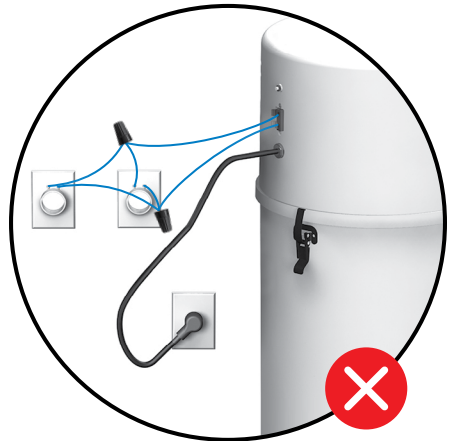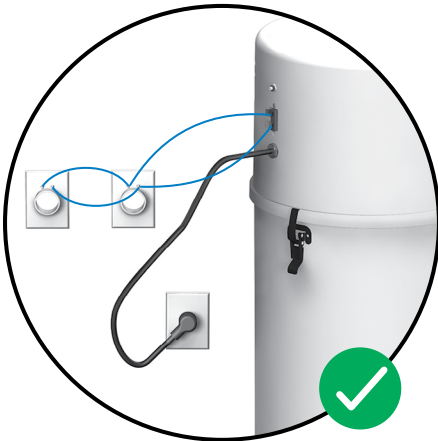


# ELECTRICAL POWER SUPPLY

## DIAGRAM OF AN APPROPRIATE CONNECTION

All units used in North America has a **circuit of 15 amp./120V**, whereas the International has a **circuit of 10 amp./230V** except for some exceptions:

Electrical panel

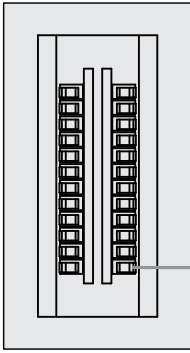

- G2-2X5: 15 amp./208V - 240V
- G2E-2X5: 20 amp./208V - 240V

The electric installation must be compliant to the building code in effect of your state or country.

If you experience voltage surge problems on your electrical circuit in spite of adequate connections, a high magnetic circuit breaker can be installed on your electrical panel. Contact an electrician for more information.

# ELECTRICAL POWER SUPPLY

## GROUNDING INSTRUCTIONS


These units must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**WARNING** - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded.

**DO NOT MODIFY THE PLUG PROVIDED WITH THE UNITS -  
IF IT DOES NOT FIT THE OUTLET, HAVE A PROPER OUTLET INSTALLED  
BY A QUALIFIED ELECTRICIAN.**

These units are for use on a nominal 120V or a 230V circuit and have a grounding attachment plug that looks like the one illustrated below. Make sure that the electrical cord is connected to an outlet having the same configuration as the plug.

**NO ADAPTOR SHOULD BE USED WITH THIS APPLIANCE.**

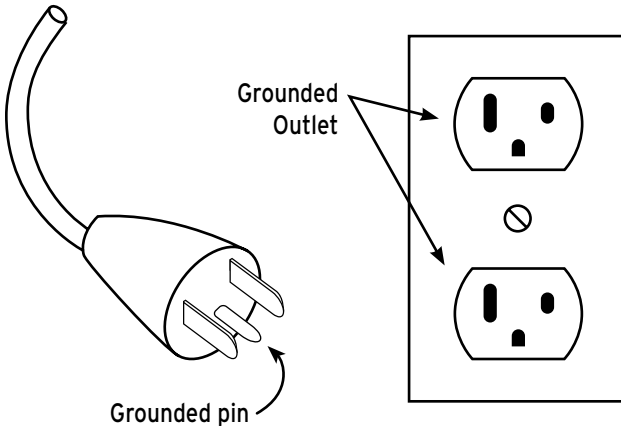

\*Illustration of a north-american electrical outlet

# MAINTENANCE PROCEDURES

Each system requires a minimum maintenance, without any exception.

## MOTOR BRUSHES

Beyond the occasional external cleaning, we recommend that you **inspect your motor brushes after 500 hours of use** to check how worn they are and have them replaced if necessary. On average, this inspection should occur once every 5 to 7 years. When the time comes, contact your retailer or distributor for this maintenance procedure. Take note that the motor brushes are not included in the warranty.

## FILTER AND DUST BAG

You must clean the filter and replace the dust bag periodically. This will prevent your vacuum from losing any power and will extend its lifespan.

- The dust bag **CANNOT** be washed or emptied. It must be replaced by a new one. If you notice a flagrant decline of power, it may be a sign of a full dust bag and must be changed. For a reference purpose, a regular usage with a 3,75 gal (17L) unit, the bag usual gets replaced after 6 to 12 months. For a 9 gal (41L) unit, it is around 12 to 18 months. **DO NOT CHANGE THE DUST BAG WHILE THE UNIT IS RUNNING.**
- The filter can be easily cleaned in the washing machine but it is not recommended to put it in the dryer. It must be **COMPLETELY DRY** before reusing. Regarding the cleaning frequency of the cage filter, we recommend cleaning whenever the dust bag is changed.

To change them, release the clamps from the tank.

1. Remove the bag and discard it.
2. Clean or wash the filter and let it dry.
3. Place the filter.
4. Place the new dust bag.
5. Reattach the tank to the main unit.

Every model of the compact series is designed to operate with a dust bag and a cage filter. **Improper use will void the warranty.**


# WEEE GUIDELINES

This unit complies with the **WEEE (Waste Electrical and Electronic Equipment) Guidelines**, which promote the recycling of this type of waste equipment and encourage the development of products that are adapted to efficient waste reclamation at the end of their life cycle.

The WEEE Guidelines stipulate that the original supplier should agree to reclaim any obsolete equipment free of charge. We recommend that you advise your supplier that you would like him to reclaim your unit when you order and replace it with a new one.

Do not discard the unit with your regular garbage. The symbol representing a garbage bin on wheels on the unit's label (**Figure C**) attests to this requirement. You must ensure that, at the end of its life cycle, your unit is reclaimed, treated and recycled by an authorized retailer or firm.

For more information, contact your municipal waste management department.

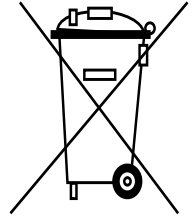

**Figure C**

## RoHS

All presented units respect the European directive RoHS which limits the usage of six dangerous substances.

## SUPPORT

If you wish to speak with a customer service representative, please contact your supplier/dealer.

To find a retailer near you, please visit our website.

# TECHNICAL PROBLEMS

## THE UNIT WON'T START UP...

### SOLUTION:

- 1) Check if the LED is lit.
- 2) Check the circuit breaker in your electrical panel.
- 3) Check the unit's circuit fuse/breaker.
- 4) Check the 24-volt circuit, as follows:

Establish an electrical contact between the two 24V circuit terminals of the unit with a metal object such as a screwdriver or a coin.

- If the unit starts up, either the 24V wire is cut or disconnected from one of the wall inlets, or the hose is defective.
- If the unit does not start up after all these steps, the printed circuit is defective.


## THE UNIT WON'T SHUT DOWN...

### SOLUTION:

Check the 24-volt circuit as follows:

Disconnect one of the two wires on the unit's 24-volt circuit.

- If the unit shuts down, the problem could be that two 24-volt wires are touching themselves somewhere or that the wall inlet is defective.
- If the unit doesn't shut down, the printed circuit is defective.  
Unplug the power cord.

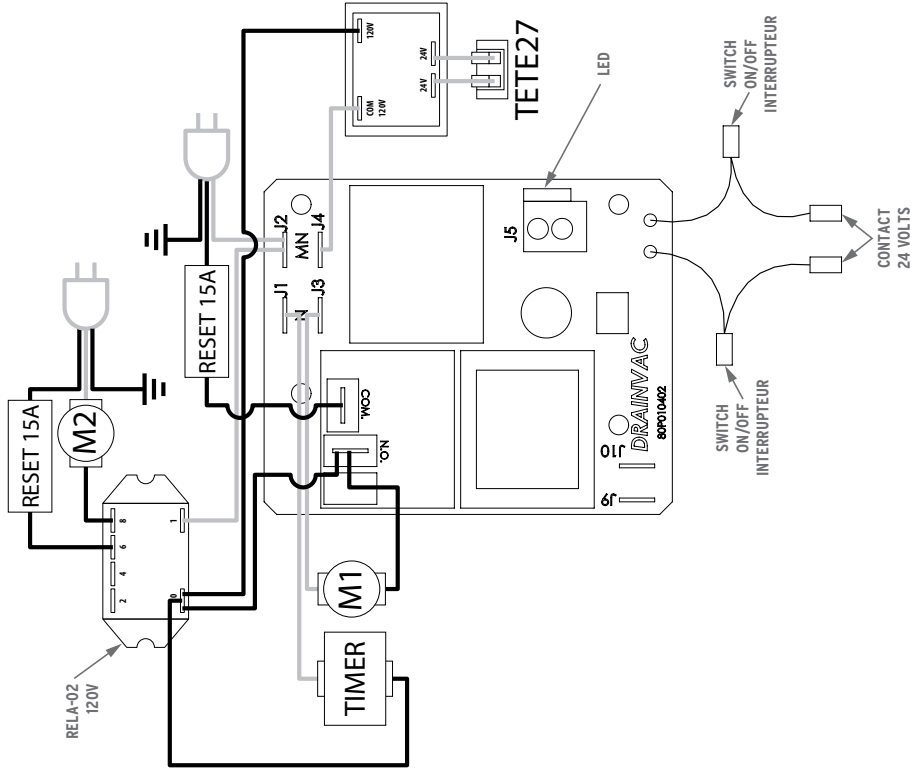



**ANNEXE I**  
**CIRC02**  
**DIAGRAMME DE CONNEXIONS**  
**1 MOTEUR**  
**110-120 VOLTS**  
 PR0106, S1008, G2-008

**ANNEX I**  
**CIRC02**  
**CONNECTION DIAGRAM**  
**1 MOTOR**  
**110-120 VOLTS**  
 PR0106, S1008, G2-008

**ANNEXE II**  
**CIRC03**  
**DIAGRAMME DE CONNEXIONS**  
**2 MOTEURS**  
**110-120 VOLTS**  
 G2-2X3

**ANNEX II**  
**CIRC03**  
**CONNECTION DIAGRAM**  
**2 MOTORS**  
**110-120 VOLTS**  
 G2-2X3

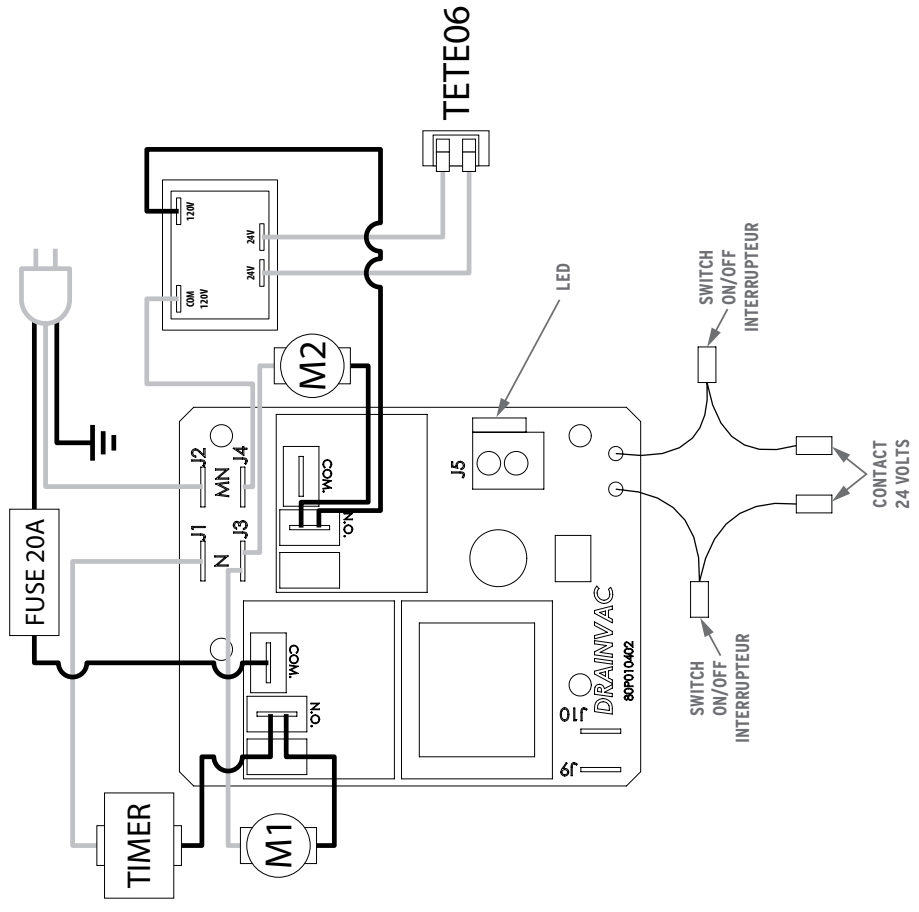

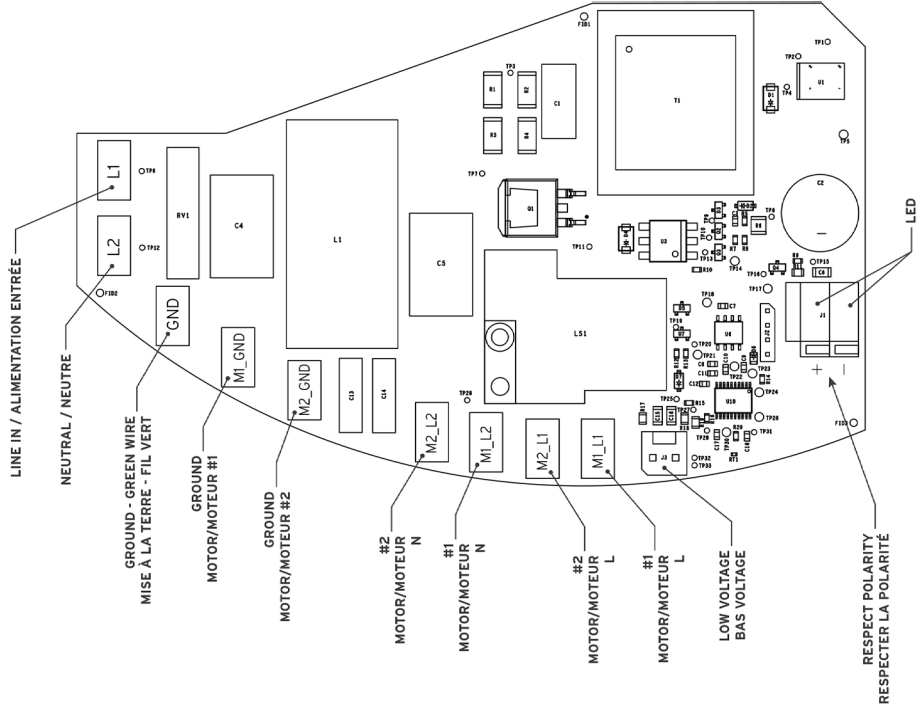

**ANNEXE III**  
**CIRC18**  
**DIAGRAMME DE CONNEXIONS**  
**1 ET 2 MOTEURS**  
**220-240 VOLTS**

SE1007, G2E-007, G2-007H, G2E-00H, G2-2X5, G2E-25

**ANNEX III**  
**CIRC18**  
**CONNECTION DIAGRAM**  
**1 AND 2 MOTORS**  
**220-240 VOLTS**

SE1007, G2E-007, G2-007H, G2E-00H, G2-2X5, G2E-25

**ANNEXE IV**  
**CIRC19**  
**DIAGRAMME DE CONNEXIONS**  
**1 MOTEUR**  
**220-240 VOLTS**  
PROE107, PROE207

**ANNEX IV**  
**CIRC19**  
**CONNECTION DIAGRAM**  
**1 MOTOR**  
**220-240 VOLTS**  
PROE107, PROE207

